

# Prismatic Keyboard USER GUIDE

## 【Specification】



Type : Ultrathin mechanical keyboard  
 Number of keys : 67K layout  
 Backlit : RGB  
 Transmission mode : Separated braided cable, 1.2m  
 Connector : USB interface, gold plated  
 Switch lifetime : more than 70 million times  
 Voltage : 160mA  
 Size : L 293 \* W 103 \* H 17mm  
 Net weight : 306g±5g



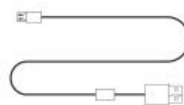
Keyboard x 1

## 【 Main Features】

- Support wired & bluetooth modes
- Metal upper case
- Ultrathin body
- Cool RGB backlit
- High-end performance
- Custom setting available



User Guide x 1

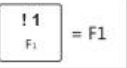

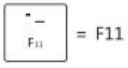


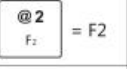
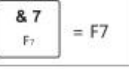
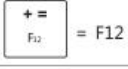

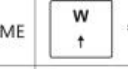
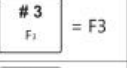

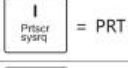
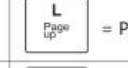
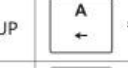
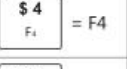
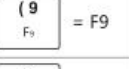
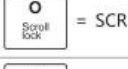


 
 


 


USB cable x 1

## 【Combination key function】

FN + ESC = press and hold on 2 seconds to switch wired & bluetooth mode.

FN + WIN = Lock WIN & APP

Fn +	 = F1	 = F6	 = F11	 = INS	 = PGDN
	 = F2	 = F7	 = F12	 = HOME	 = TUP
	 = F3	 = F8	 = PRT	 = PGUP	 = ←LEFT
	 = F4	 = F9	 = SCR	 = DEL	 = IDOWN
	 = F5	 = F10	 = PAUSE	 = End	 = →RIGHT

## 【Wired Part】

1. LED: main keyboard RGB backlit + four sides RGB backlit
2. System support: Win ME, Win2000, Win XP, Vista, Win7, Win8, Win10
3. Locking WIN & APP keys are supported. When WIN key turns off means WIN & APP keys locked. After unlocking, the WIN key light is always on.
4. Press FN+ BACK and hold on 2 seconds to reset.
5. Press FN + "WIN" to change the color of indicator.
6. FN + TABLE = Switch the light mode of main keyboard

### Lighting modes of main keyboard

Plug USB, show "Endless stream" first, then enter into the lighting mode and function of last time.

1. Press FN + TABLE to "Steady Lighting".

PS: FN + "↑" brightness up, 5 levels adjust  
 FN + "↓" brightness down, 5 levels adjust  
 FN + "←/→" to change color (8 color: red-green-blue-yellow-purple-cyan-white-rainbow)

2. Press FN + TABLE again to "Breath"

PS: FN + "}" speed up, 4 levels adjust  
 FN + "{" speed down, 4 levels adjust  
 FN + "←/→" to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

3. Press FN + TABLE again to "Mixed Light Change"

PS: FN + "}" speed up, 4 levels adjust  
 FN + "{" speed down, 4 levels adjust

4. Press FN + TABLE again to "Launch"

PS: FN + "}" speed up, 4 levels adjust  
 FN + "{" speed down, 4 levels adjust  
 FN + "↑" brightness up, 5 levels adjust

FN + “↑” brightness down, 5 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

5. Press FN + TABLE again to “Rain”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust  
FN + “↑” brightness up, 5 levels adjust  
FN + “↑” brightness down, 5 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

6. Press FN + TABLE again to “Rainbow Roulette”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust

7. Press FN + TABLE again to “Ripple”

PS: FN + “}” speed up, 4 levels adjust

FN + “{” speed down, 4 levels adjust  
FN + “↑” brightness up, 5 levels adjust  
FN + “↑” brightness down, 5 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

8. Press FN + TABLE again to “Starry”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust  
FN + “↑” brightness up, 5 levels adjust  
FN + “↑” brightness down, 5 levels adjust

9. Press FN + TABLE again to “Pass Without Trace”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust  
FN + “↑” brightness up, 5 levels adjust

FN + “↑” brightness down, 5 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

10. Press FN + TABLE again to “Endless Stream”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust  
FN + “↑” brightness up, 5 levels adjust  
FN + “↑” brightness down, 5 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

11. Press FN + TABLE again to “Stream”

PS: FN + “}” speed up, 4 levels adjust  
FN + “{” speed down, 4 levels adjust  
FN + “←/→” to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

## 12. Press FN + TABLE again to "Shadow"

PS: FN + "}" speed up, 4 levels adjust

FN + "{ [" speed down, 4 levels adjust

FN + "↑" brightness up, 5 levels adjust

FN + "↑" brightness down, 5 levels adjust

FN + "←/→" to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

## 13. Press FN + TABLE again to "Sinusoidal Light Wave"

PS: FN + "}" speed up, 4 levels adjust

FN + "{ [" speed down, 4 levels adjust

FN + "↑" brightness up, 5 levels adjust

FN + "↑" brightness down, 5 levels adjust

FN + "←/→" to change color (8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

### Game mode & custom setting

1. Press FN + "~" to switch 5 default game modes. Also press FN + "TABLE" to lighting mode.
2. FN + "~" (First time)= Game mode 1 (FPS) - ASDW ↑ ↓ ← → ESC lighted
3. FN + "~" (Second time)= Game mode 2 (CF) - ASDW Ctrl Shift Alt Space RGQEB 1-5 Tab lighted
4. FN + "~" (Third time)= Game mode 3 (COD) - QWERTASDFGCV 1-7 Ctrl Shift lighted
5. FN + "~" (Fourth time)= Game mode 4 (LOL) - QWERTASDF 1-7 lighted
6. FN + "~" (Fifth time)= Game mode 5 (QQ race) - WRASD Ctrl Alt Shift ↑ ↓ ← → lighted
7. Under any game mode, press FN + SHIFT-R to custom recording and Shift-R will flicker. Then press the same key to the color you want. After finish setting, press FN+shift-R to store and Shift-R turns off.

### Four sides lighting modes

Press FN + APP to switch four sides lighting modes, 8 modes in total.

#### 1. Clockwise race (left to right)

FN+"ALT-R"+"}" = Four sides lighting speed up, 4 levels adjust

FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

FN+"ALT-R"+"←/→"=Switch four sides lighting color

(8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

#### 2. Antilockwise race (right to left)

FN+"ALT-R"+"}" = Four sides lighting speed up, 4 levels adjust

FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

FN+"ALT-R"+"←/→"=Switch four sides lighting color

(8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

#### 3. Flowing light

FN+"ALT-R"+"}" = Four sides lighting speed up, 4 levels adjust

FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

#### 4. Steady Lighting

FN+"ALT-R"+"←/→"=Switch four sides lighting color

(8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

#### 5. Breath

FN+"ALT-R"+"}" = Four sides lighting speed up, 4 levels adjust

FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

FN+"ALT-R"+"←/→"=Switch four sides lighting color

(8 color: red-green-blue-yellow-purple-cyan-white-mixed color)

6 . Neon

FN+"ALT-R"+"}"] = Four sides lighting speed up, 4 levels adjust  
FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

7 . Flicker

FN+"ALT-R"+"}"] = Four sides lighting speed up, 4 levels adjust  
FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

8 . Random transformation

FN+"ALT-R"+"}"] = Four sides lighting speed up, 4 levels adjust  
FN+"ALT-R"+"{ [" = Four sides lighting speed down, 4 levels adjust

9 . Turn off

### 【 Bluetooth part (without backlit) 】

1. Press FN + "ESC" and hold on 2 seconds to bluetooth mode, meanwhile, all lights turn off. Only when "ESC" flickers blue light and begins searching default device 1 does it stand for entering bluetooth mode. Default setting is wired status. When switching wired & bluetooth modes, the keyboard will remember the current status.

2. The keyboard supports connecting 3 devices under bluetooth mode through combined key Fn+SHIFT-L (device 1 code key),Fn+CTRL-L(device 2 code key) and Fn+ALT-L(device 3 code key). Then press FN+Q\FN+E\FN+R to switch around device 1 & 2 & 3.

First, press "Fn+SHIFT-L" and hold on 3 seconds to code device 1.

Second, "ESC" flickers blue light for 2 seconds and turns off for 1 second,

Third, "ESC" flickers to search device and turns off after connected.

Fourth, press "Fn+CTRL-L" and hold on 3 seconds to code device 2.

Fifth, press "ESC" flickers blue light for 2 seconds and turns off for 1 second,

Sixth, "ESC" flickers to search device and turns off afterconnected.

Seventh, press "Fn+ALT-L" and hold on 3 seconds to code device 3.

Eighth, "ESC" flickers blue light for 2 seconds and turns off for 1 second,

Ninth, "ESC" flickers to search device and turns off after connected.

If the device can't be connected with the keyboard within 1 minute, then automatically exits and backs to the previous state.

After 3 devices code successfully, you can press Fn+Q/Fn+E/Fn+R to switch them.

If changing the devices, press Fn+SHIFT-L/ Fn+CTRL-L/ Fn+ALT-L to re-code.

3. Bluetooth mode can't be changed to wired mode if USB cable isn't connected. Similarly, if you unplug the USB cable in wired mode, it will automatically switch to bluetooth mode. Only plugging in the USB cable can you switch wired and bluetooth modes by pressing FN + "ESC".

4. Charging indicator(red and green LED): Red light stands for charging. Green light is full.

5. Low voltage indicator ("ESC" red light): When battery voltage is lower than 3.3V and a key is triggered, "ESC" flickers red color, without trigger, the light turns off.

6. If no key is triggered within 3 minutes under normal working time, the keyboard will enter the power saving mode (sleep) and wake up by pressing any key.
7. Using lithium power supply, the keyboard starts charging by inserting USB cable and stops charging after full.

### 【Attention】

1. When changing bluetooth mode to wired mode, bluetooth battery switch must be turned off first and then plug the USB cable to connect the computer in case device can't be recognized by the computer for power conflict.
2. If you need to connect new device under bluetooth mode, you must clean up the old device first and press combined keys (Fn+SHIFT-L/ Fn+CTRL-L/ Fn+ALT-L) to re-code.
3. Although this product has automatic power-saving features, but in order to achieve further energy-saving effect and extend battery life, please turn off the power switch when not using.

4. If there is any abnormality during keyboard use, please turn off the bluetooth power switch and then turn it on to reconnect the device.
5. When USB cable is plugged to the computer, but pressing FN + ESC and holding on 2 seconds can't switch to wired mode, only the "B" key light flickers 1 time. That means the computer USB port isn't connected with the keyboard successfully. Please check whether the USB cable is plugged well or not.
6. When keyboard connects to a new device, but it doesn't work. Please replace different devices for testing. If you still can't use it after replacing, please send email to [Info@anidees.com](mailto:Info@anidees.com)

